텐션메타 / TS205 P

모델:: Tension Star "TS205P"

자동 zero adjustment 기능

V 형태 롤러 혹은 ceramic pins 타입 (선택)

USB 2.0 PC connection 지원: 통신 및 측정

On-line S/W for data collection and analysis 포힘

측정범위: 0.1 to 400 cN

분해능: 0.1 cN from 0 to 100 cN 1 cN from 100 to 400 cN

측정기 표시: LCD graphic display, 10.5 mm letter

Memory 기능: 최대 999 number (AV, Peak, low)

구성: Carrying case, USB Charger and USB cable, Manuel and test report 포함



TECHNCAL DATA

TS205 P.


Roller 타입: m/min, Ceramic pins 타입: 6000 m/min

Accuracy: $+/-2\% = (1 - rated value / Indication) \times 100$


소비전력: 0.19 W

전원: 6 x 1.2 Volt AAA AKKU

최대 사용가능 과용량" 150% Internal Frequency: 700 Hz

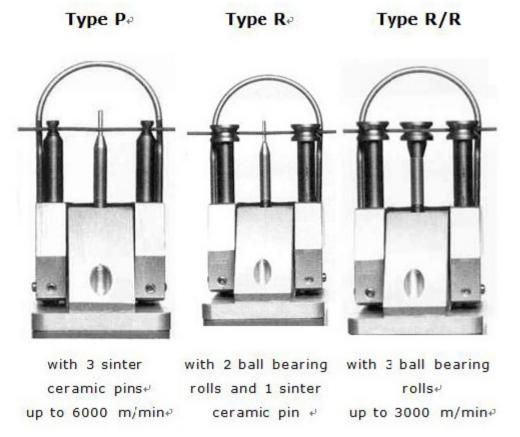

up to 3000 m/min₽

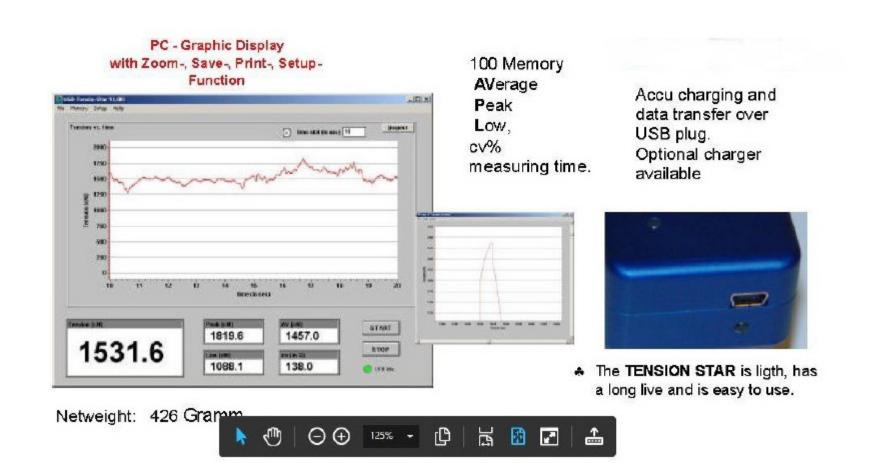

Desax Engineering, P.O. BOX, Sala 4, CH - 7204 Untervaz, Switzerland Telefon 081 / 3300 118 / Telefax 081 / 3300 119 / E_mail: info@desax.net

TENSION STAR TS205

Problems with the install.

The TensionStar software always OK by installation.

Swich on the instrument connect the PC and TS 205 by USB cable. Windows start the USB driver.

The problem is windows setup of USB driver.

Go to the Windows system and check the USB driver is installed. The USB FTDI driver must be active.

The instrument need a lot off PC capacity, so may your PC is to slow (1MHz) or the memory (500M Ram) to small.

You use Anti virus and firewall (Norton, Mcaffe etc.). Becouse off the high data transfer the Anti virus software breack down the transfer.

By setup you check the software is free of virus, so for measuring stop the anti virus program and firewall.

To many programs are running in the background, make windows slowly.

Desax Engineering, P.O. BOX, Sala 4, CH - 7204 Untervaz, Switzerland Telefon 081 / 3300 118 / Telefax 081 / 3300 119 / E_mail: info@desax.net
TENSION STAR TS205



